






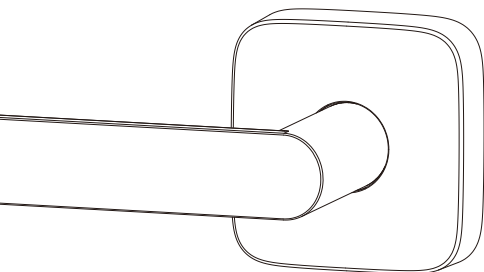

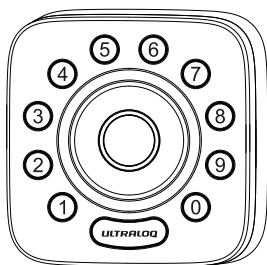


# ***ULTRALOG***

## **U-Bolt Pro Wi-Fi**

**Installation and User Guide  
(V2.4)**



## Important Notes

-  Do not use a power drill for installation.
-  Install and test the lock with the door open to avoid being locked out.
-  Please read and follow the instructions carefully before contacting customer support.
-  Before returning the lock, please remove the device from the app settings and contact customer support.
-  Do not insert the batteries before installing the lock.
-  Operating temperature ranges:
  - Exterior:** -4 °F (-20 °C ) to 149 °F (65 °C)
  - Interior:** 14 °F (-10 °C) to 131 °F (55 °C)
-  Rechargeable batteries or non-alkaline batteries are not recommended. Use AA alkaline batteries only.

**Note:** The Exterior Assembly of the U-Bolt Pro Wi-Fi is waterproof, but the Interior Assembly is not waterproof due to the exposed battery compartment.

## Statements

To ensure the best service, please create your account at [www.ultralq.com/register](http://www.ultralq.com/register) before using the product.

## Terms & Policies

Before using any ULTRALOQ products, please read all applicable terms, rules, policies, and usage provisions found at [www.ultralq.com/privacy](http://www.ultralq.com/privacy). By using your ULTRALOQ, you agree to be bound by the ULTRALOQ Privacy Policy.

## Need Help?


For technical documents and more

Please visit [support.ultralq.com](http://support.ultralq.com)

or call 1-844-439-8832

# Packing List

Interior  
Assembly



Exterior  
Assembly




Interior Assembly  
Mounting Plate



Strike




Bolt



Reset Needle



Screw A



Screw B



Screw C



Screw D




Door Sensor



Backup Keys



AA Alkaline  
Batteries




May not be included  
for some regions

User Guide



Drill Template



# Installation Guide

## Installation Video



Please scan the QR code to watch the installation video.

Or you can also view the website directly.  
[www.ultraoq.com/U-Bolt-Series](http://www.ultraoq.com/U-Bolt-Series)

## 1. Prepare the Door and Check Dimensions

### Step 1

Measure to confirm that the door is between  $1\frac{3}{8}" \sim 1\frac{3}{4}"$  (35 mm-45 mm) thick.

**Note:** For thicker doors between  $1\frac{3}{4}"$  (45mm) -  $2\frac{1}{4}"$  (57mm), thick door kit is requested. Please visit [www.ultraoq.com](http://www.ultraoq.com) to order the "ULTRALOQ Thick Door Kit".

### Step 2

Measure to confirm that the diameter of the hole is  $2\frac{1}{8}"$  (53 mm) or  $1\frac{1}{2}"$  (38 mm)

### Step 3



Measure to confirm that the backset is either  $2\frac{3}{8}"$  or  $2\frac{3}{4}"$  (60 mm or 70 mm) .

### Step 4

Measure to confirm that the diameter of the hole in the door edge is  $1"$  (25 mm).

### Step 5

Measure to confirm the depth of the hole in the frame is at least  $1"$ (25 mm).

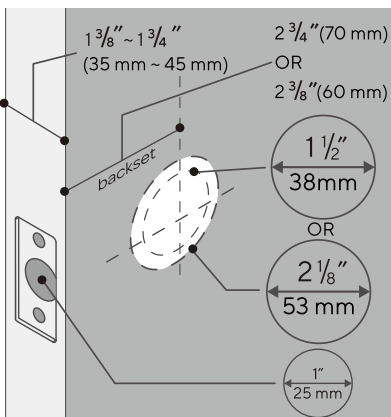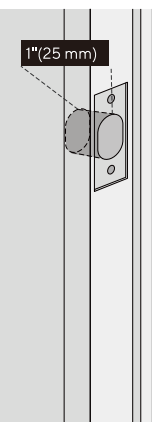

If you have a new door, please drill the holes according to Drill Template.

## 2. Installing Bolt and Strike

### Step 1: Install the Bolt

- Insert the bolt into the door. Making sure the “UP ↑” icon faces upward.


**Note:** By default, the bolt is set to a 2-3/8" (60mm) backset.

- To adjust to 2-3/4" (70mm): Make sure the bolt is fully retracted.
- Press the bolt, then twist it until you feel a slight click. This locks it in the extended backset position.

**Note:** Always ensure the bolt is retracted before making adjustments.

### Step 2: Install the Strike

- Align the strike plate with the door frame.
- Secure it in place using the provided screws A(x4)

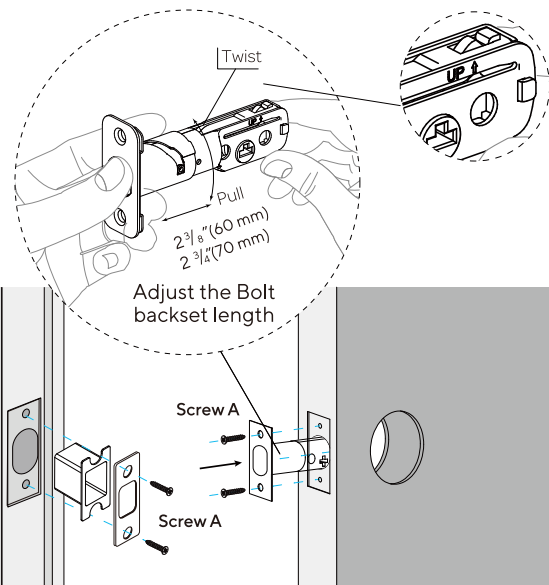

## 3. Installing the Exterior Assembly


### Step 1: Position and Install

- Ensure the bolt is fully retracted.
- Make sure the cylinder tailpiece is horizontal, with the bump pointing upward.
- Carefully install the Exterior Assembly onto the door.


**Do not insert the mechanical key during installation.**

## Step 2: Route the Cable


- Carefully thread the cable through the hole located below the bolt to the interior side of the door.

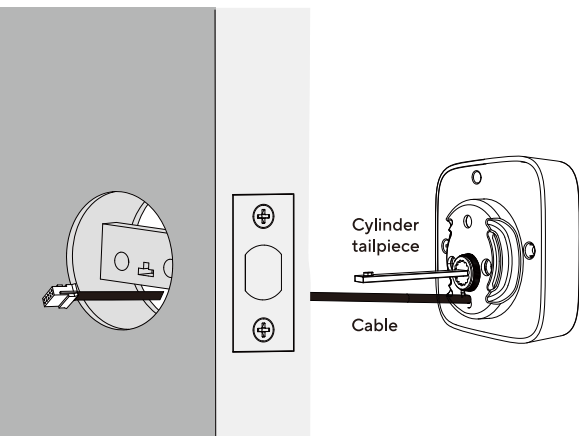

If your door has a  $1\frac{1}{2}$ " (38 mm) bore hole, remove the spacer from the exterior assembly as shown.

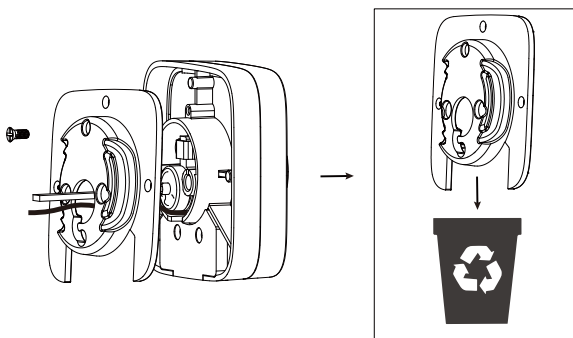

## With No Spacer

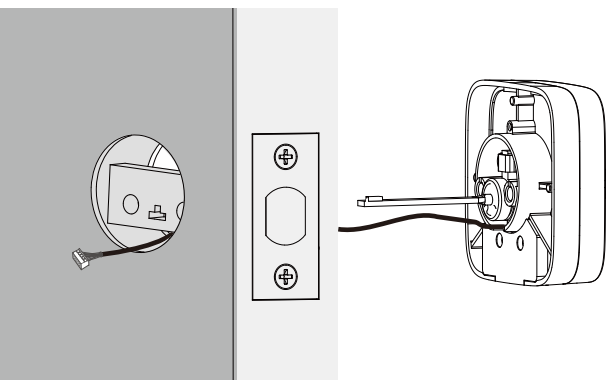


## 4. Installing the Interior Assembly Mounting Plate

### Step 1: Route the cable

Route the cable through the hole in the Interior Assembly Mounting Plate.

### Step 2: Secure the Mounting Plate

Secure the Interior Assembly Mounting Plate to the Exterior Assembly using Screw B(x2).

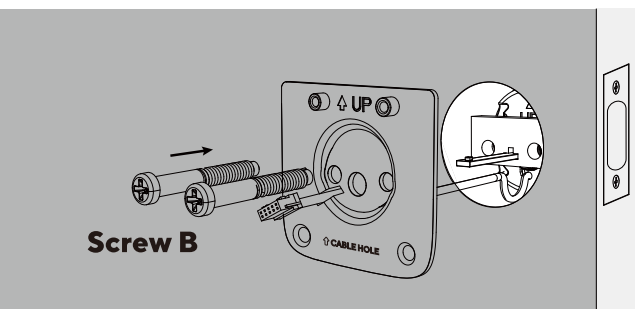

## 5. Installing the Interior Assembly


**Warning:** Do not install the batteries before installing the interior assembly, as this may prevent the keypad from powering on properly.

### Step 1: Remove Battery Cover

Remove the battery cover from the Interior Assembly.


### Step 2: Connect the cable to the Interior Assembly

- Insert the cable connector into the socket on the Interior Assembly.
- Ensure the white-painted side is facing up.
- Press the connector firmly until it is fully seated.

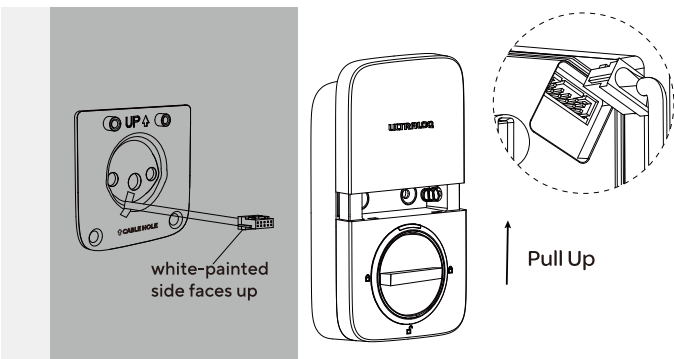


### **Step 3: Set to Unlocked Position**

- Rotate the knob to the vertical position to keep the lock unlocked during installation.

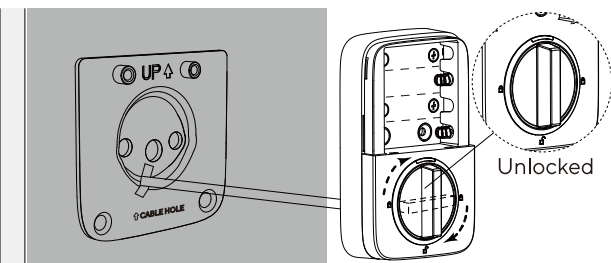

### **Step 4: Attach and Secure**

- Align the Interior Assembly with Mounting Plate.
- Use Screw C(x2) to secure the Interior Assembly in place.

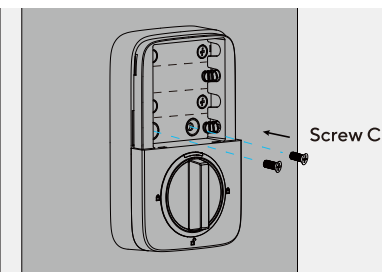


## **6. Installing the Batteries and Performing the Door Handling Process**

This step helps your lock learn which way your door opens, so it can work properly.

### **Step 1: Set to locked position**


Rotate the knob to the horizontal position to keep it locked.

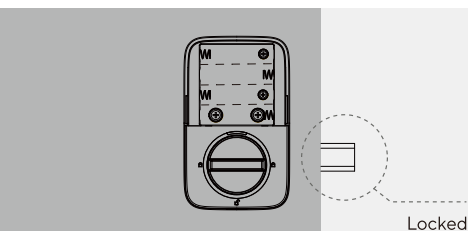



## Step 2: Insert Batteries

- Insert 4 AA alkaline batteries into the battery compartment.
- Reattach the battery cover.

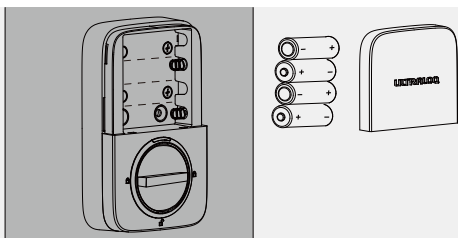

**Note:** Any fingerprint or pressing any 4-8 digit code then ULTRALOCK Button can unlock U-Bolt Pro Wi-Fi in Factory Default Mode.

## 7. Installing the Door Sensor(Optional)



Door sensor lets you know whether the door is open or closed through the App. When Auto-Lock is enabled, your LOCK will automatically lock only when the door is fully closed.

### Guidelines:

- Do not mount the door sensor on the keypad side of the lock.
- Avoid installing the sensor on metal doors that interfere with the internal magnet. (In such cases, the door sensor may stick to the metal door magnetically and malfunction.)
- The sensor is suitable for:
  1. Wooden doors.
  2. Metal doors that do not interfere with the sensor's magnetic field (i.e., the sensor does not stick magnetically to the door).

### Installing with Screw D

- Drill two holes at the marked positions.
- Press the door sensor against the wall and secure it using Screws D (x2).
- Attach the door sensor cover by sliding it from top to bottom along the chute until it clicks into place.

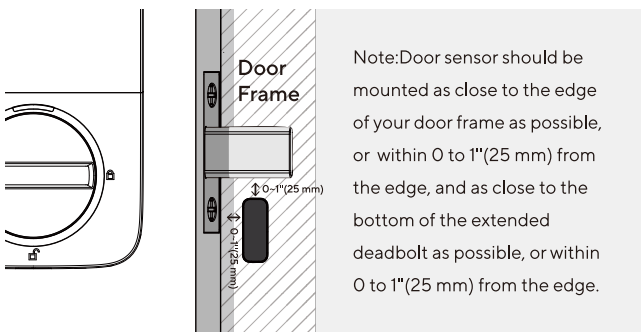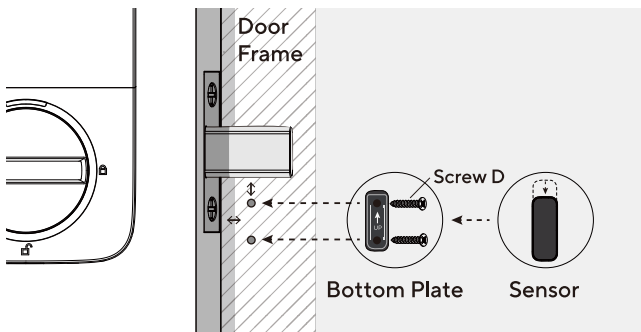

**Note:** Please refer to the guide in U home app for more information.

## User Guide

### User Guide Video


Please scan the QR code on the left to watch the user guide video. You can also visit the website directly at [www.ultraloq.com/u-bolt\\_pro\\_wifi/guide](http://www.ultraloq.com/u-bolt_pro_wifi/guide).



For the configuration guide of integration (Alexa, Google Assistant, IFTTT and SmartThings), please scan the QR code on the right or visit: [support.ultraloq.com](http://support.ultraloq.com), then chose "Works with" to watch the user guide video.

# 1. Product Overview

## 1.1 Exterior Components

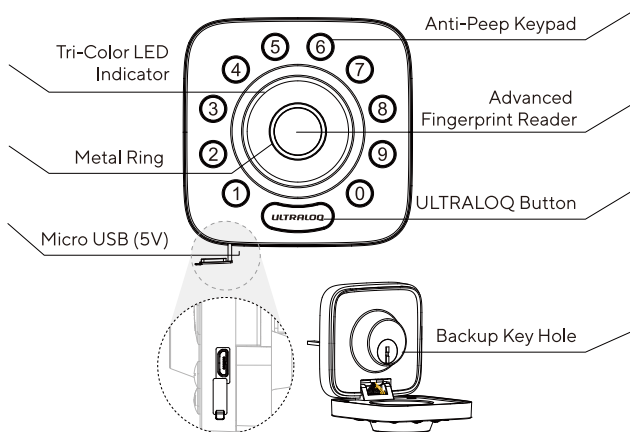

### ① Anti-Peep Keypad

Used to enter the access code and unlock the door from outside.

### ② Advanced Fingerprint Reader

Verify fingerprint access and unlock the door from the outside.

### ③ Backup Key Hole

Allows mechanical key access in case of battery failure or in other emergency situations.

### ④ Micro USB (5V)

Used to connect power bank to activate the lock when battery runs out.


### ⑤ Tri-Color LED Indicator

- **Green:** Lights up when manual programming is successful or when your entry is verified.
- **Red:** Lights up when manual programming fails or when entry verification is incorrect.
- **Blue:** Lights up when communication is connected or when entering standalone mode.

### ULTRALOG Button

Used to lock from the outside, illuminate the keypad for code entry, and confirm the previous operation.

## 1.2 Interior Components

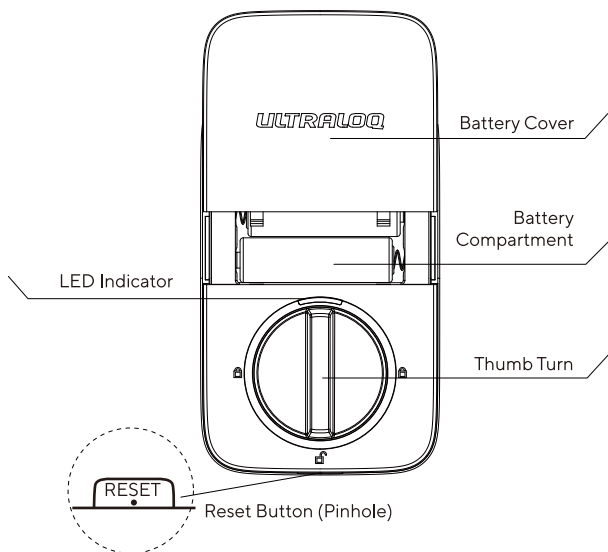

### Reset Button (Pinhole)

Used to reset the lock to Factory Default settings.

To reset, use a Reset Needle to press and hold the reset button for about 10 seconds until you hear one long beep followed by two short beeps.

### Battery Compartment

Insert 4 AA alkaline batteries. Rechargeable or other battery types are not recommended.

### Battery Cover

Protects the battery compartment and product label.

### Thumb Turn

Used to manually lock and unlock the door from inside.

### LED Indicator

Turns green when the door is unlocked.

## 1.3 Low Battery Alarm

When the battery is low:

- A low battery alert will be triggered on the lock and App .
- Tri-color LED indicator will flash red and emit 3 beeps before when the lock is retracted.

**Note:** Please replace the batteries promptly to avoid lock failure.

## 2. Lock Setup



Scan QR code to download the App



### **Step 1: Download App**

Scan the QR code to download the app, or search for:

- “U home ” in the App Store (iOS) .
- “U home ” in the Google Play Store (Android).

### **Step 2: Register and Log In**

- Open the U home app.
- Create an account or log in with your existing credentials.

### **Step 3: Prepare for Pairing**

- Ensure the lock is in **Factory Default Mode**. To reset your lock to Factory Default Mode, please refer to Page 14.
- Turn on Bluetooth on your smartphone.
- Stay within 10 feet of the lock.
- Search for the lock within the app.

### **Step 4: Pair the Lock**

- Follow the on-screen instructions in the app to complete pairing.
- Ensure your phone is connected to a 2.4GHz Wi-Fi network.

**5GHz Wi-Fi networks are not supported**

### **Don't Want to Use the App?**

You can program the lock manually in Standalone Mode. See the guide on Page 16 for instructions.


## 3. Using Your Lock

### **3.1 Unlocking From Outside**

You can unlock the U-bolt Pro Wi-Fi using any of the following methods:


- **User Code**

Enter your 4-8 digit code, then press ULTRALOCK button to unlock.

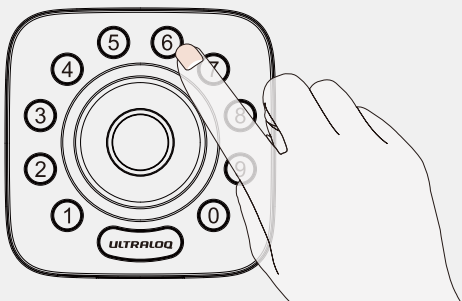

- **Fingerprint**

Place your finger on Fingerprint Reader to unlock.

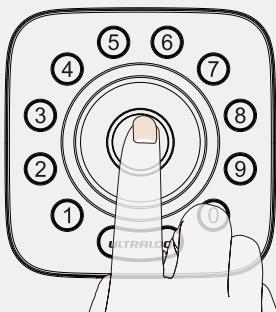

- **Smartphone**

Use your smartphone to unlock. Please refer to the guide in app.



### 3.2 Locking From Outside

- Press ULTRALOCK button to lock manually.
- Enable Auto Lock feature and the lock to automatically relock after the door is closed.

### 3.3 Unlocking From Inside

- Rotate the interior thumb turn to the vertical position to unlock.

### 3.4 Resetting the Lock

*Resetting will erase all data and restore factory default settings.*

• **If you are the U home app owner:**

1. Open the app and click "Remove Device" to remove the lock from your U home .
2. You will hear 1 long beep followed by 2 short beeps, confirming the reset was successfully.

• **If the lock does not reset automatically:**

1. Use a Reset Needle to press the Reset Button.
2. Hold for 10 seconds, until you hear 1 long beep followed by 2 short beeps.

### 3.5 Replacing Batteries


Use **4 high-quality AA alkaline batteries** when power is low or depleted. Open the battery cover and replace all batteries at once for optimal performance.

### 3.6 5V Emergency Power

Micro USB interface is used to connect regular 5V power bank to activate the lock in case the battery runs out.

### 3.7 Emergency Key Override

U-Bolt Pro Wi-Fi can be unlocked with backup key. Follow the steps in the picture below to pull the front panel.

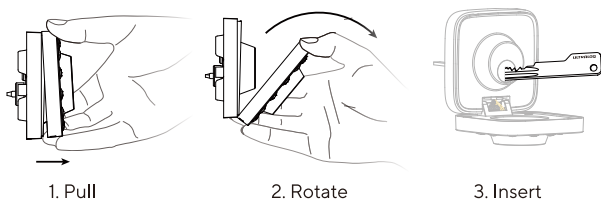

**Important Note:** Keep at least one Backup Key in a secure location outside your home in case of battery failure.

### 3.8 Enable or Disable Auto Lock

You can enable or disable the Auto Lock feature directly from the keypad:

**To Enable Auto Lock:**

- Ensure the bolt is in the unlocked position.
- Press and hold the "1" button for 3 seconds.
- The Tri-Color LED Indicator will light up green and you'll hear two beeps.

**To Disable Auto Lock:**

- Ensure the bolt is in the unlocked position.
- Press and hold the "0" button for 3 seconds.
- The Tri-Color LED Indicator will light up green and you'll hear two beeps.

*Tip: You can also enable/disable Auto Lock and customize the relock delay in the U home app.*

### 3.9 Anti-Peep Keypad

The lock supports a Vague Code (anti-peep feature) of up to 16-digits. As long as your correct user code appears in the correct sequence within the digits entered, the door will unlock.

#### Example User Code: 123456

##### Valid Vague Code

- 123456XXXXXX
- XXXXXX123456
- XXX123456XXX


"X" represents any random digit. The correct code must appear in order, even if surrounded by other digits.

### 3.10 Place Finger

Bottom View



Top View

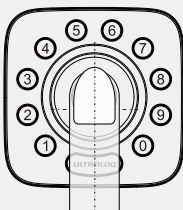

Side View



#### Some Tips to Improve Fingerprint Entry

1. For a higher recognition rate, please try to cover the Fingerprint Reader completely with your finger, touching the surrounding metal ring.
2. Make sure that your finger and Fingerprint Reader are clean and dry. For Fingerprint Reader, use a clean, lint-free cloth to wipe off any dirt or debris.
3. Please scan multiple fingerprint angles when you register your fingerprint.
4. While scanning your finger, you shouldn't tap too quickly or move your finger around.

## 4. Standalone Mode Programming Guide




Note: It is recommended to use the U home app to program your lock. If you don't have a smartphone or prefer not to use the app, you can follow the steps below.

**Warning:** Standalone Mode is NOT available once the lock is registered in the app. To enable Standalone Mode, you must reset the lock to Factory Default Mode first.







### 4.1 Add Admin Code in Standalone Mode



Admin Code must be created first prior to any other programming. Only one Admin Code is available.


Operation	LED & Sound Indicator
Hold  for 3 sec	2 beeps +flashing green light
Enter a 4-8 digit Admin Code and press 	1 beep + green light, then flashing green light
Re-enter the Admin Code and press 	3 beeps + green light
Success	All lights off

### 4.2 Add User Code in Standalone Mode

Operation	LED & Sound Indicator
Hold  for 3 sec	2 beeps + flashing blue light
Enter your Admin Code and press 	3 beeps + green light, then steady blue light
Enter a 4-8 digit User Code and press 	1 beep + green light, then steady blue light
Re-enter the User Code and press 	3 beeps + green light
Success	All lights off

### 4.3 Add Fingerprint in Standalone Mode

Operation	LED & Sound Indicator
Hold  for 3 sec	2 beeps + flashing blue light
Enter your Admin Code and press 	3 beeps + green light, then steady blue light

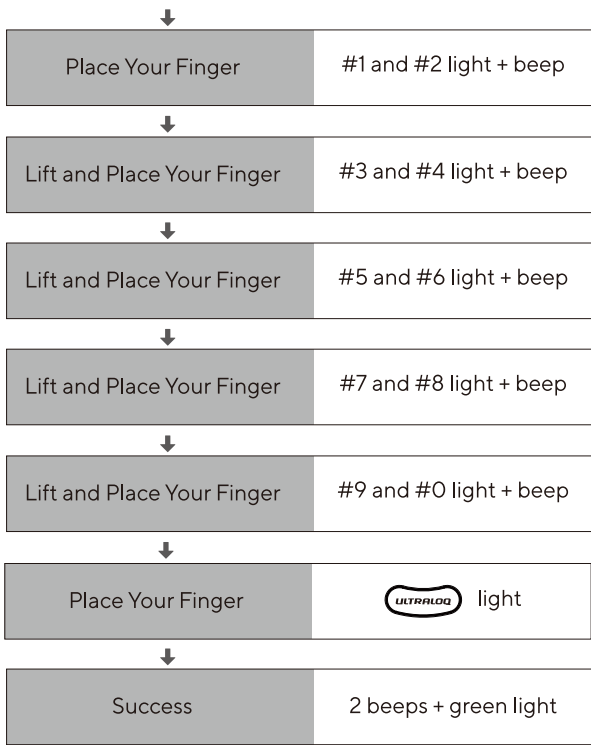

#### 4.4 Delete Admin and User Codes

To delete the Admin and all Users Codes, reset the lock to Factory Default Mode.

#### 4.5 How to Reset in Standalone Mode?

- Use a Reset Needle to press the Reset Button.
- Hold for 10 seconds, until you hear 1 long beep followed by 2 short beeps.

The lock is now reset and ready to be programmed again in Standalone Mode.

## FAQ

### 1. How do I reset the lock?

**Resetting will erase all data and restore factory default settings.**

- If registered in the U home app: Tab “Remove Device” in the app. The lock will automatically reset .
- If in Standalone Mode: Use a Reset Needle to press the Reset Button for 10 seconds, until you hear 1 long beep followed by 2 short beeps.

## 2. What if I lost the smartphone paired with the lock?

- Visit [www.uhomelabs.com/account](http://www.uhomelabs.com/account).
- Or login to the U home app on another smartphone or tablet.
- Change your U home Account password to secure your device.

## 3. How can I unlock the lock if the battery dies?

- When the battery is low, the lock will emit three beeps and the Tri-color LED indicator will flash red.
- Replace the batteries as soon as possible.
- If the battery is fully drained:
  - 1: Use the backup key to unlock.
  - 2: Connect Micro USB(5V) power bank to activate the lock temporarily.

## 4. What's the difference between Owner, Admin, Normal User and Temporary User?

Role	Permissions
Owner	Original registrant. Full access to settings, logs, and user management.
Admin	Can unlock via app, code, or keycard. Can manage users and settings.
Normal User	Can unlock via app, code, or keycard. No admin privileges.
Temporary User	Limited access during a scheduled time window.

## 5. Can I use third-party accessories (e.g., bolt)?

It is recommended to use the original ULTRALOCK accessories for best performance and stability.

## 6. What is the log capacity?

The lock stores up to 1,000 activity logs. Once full, the newest entries will overwrite the oldest automatically.

## 7. What is the user capacity?

The lock supports up to 50 users. Each user can register 1 code and 2 fingerprints.

## 8. How can I extend battery life?

Disable Remote Access to Lock in the U home app to significantly extend battery life.

**Note:**Disabling this will turn off remote features including Alexa, Google Assistant, IFTTT, SmartThings and smart notifications.


## 9. Do I need an ULTRALOCK Bridge?

No, the U-Bolt Pro Wi-Fi has built-in Wi-Fi and does not require an external hub.

## 10. What network does the lock support?

The lock supports 2.4GHz Wi-Fi only. 5Ghz Wi-Fi is not supported.

# Keep Your Records

DATE	ADMIN CODE	
NAME	USER CODE	
Felix	12345678	✓

e.g.

**ULTRALQ**  
A Brand of Xthings

© 2025 Xthings Inc. All rights reserved.  
ULTRALQ and ULTRALQ logo are trademarks of Xthings Inc. or its affiliates registered in the U.S. and other countries and regions. All other trademarks are the property of their respective owners.  
Xthings Inc. 47703 Fremont Boulevard, Fremont, CA 94538  
Engineered by Xthings, assembled in China.